


TTM® Timed Control System

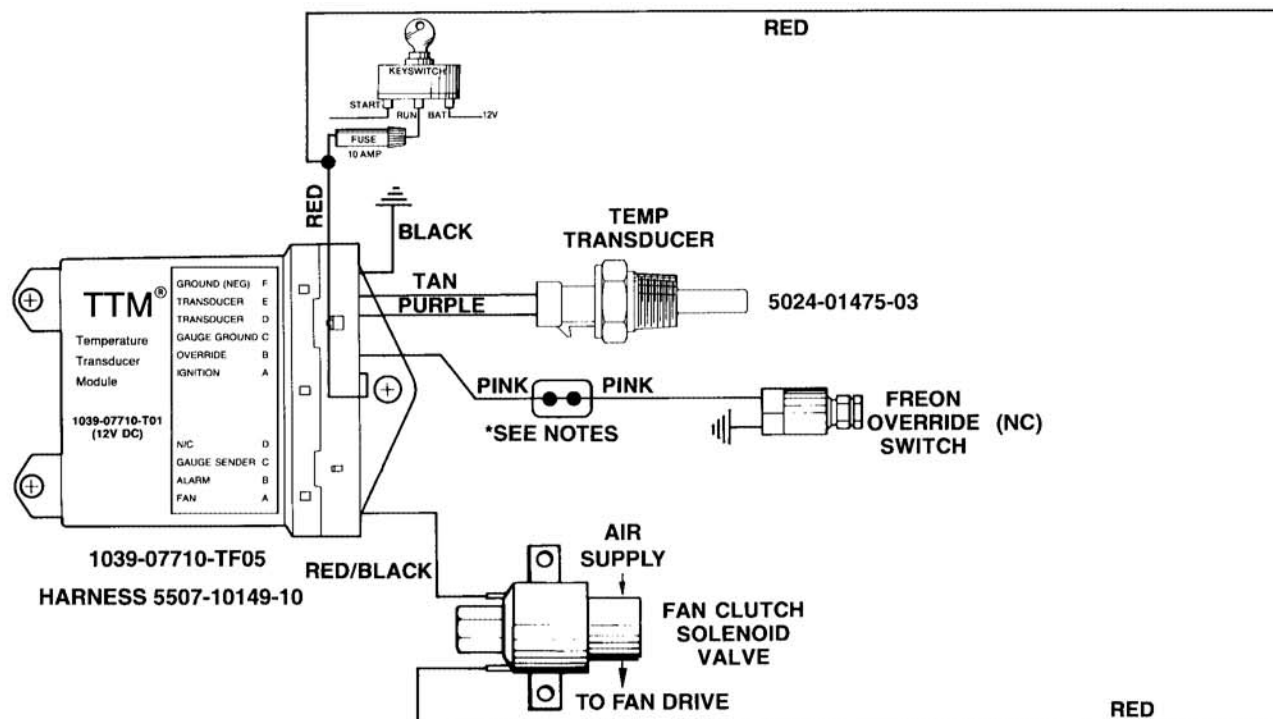

Notes: PTO/Turbo Unloader Switch: Use a pressure switch in the control circuit that will open the pink wire when the PTO or Unloader is engaged.

If required by engine manufacturer, install a normally closed charge air temperature override ALARMSTAT® 1002-04880-22.

Typical Electronic Engine Control System

